

## Access to the house

The PINPAD is located on the left side of the house wall next to the front door.

### Open with pin code

- Touch the star key (1) until the number field lights up.
- Enter PIN & confirm with key (2).



### Open with transponder

- Hold the transponder with the flat side against the center of the number field (3).
- The front door unlocks and opens.



The LOCK CYLINDER is located just below the door knob on the front door.

### Open with pin code

- Enter PIN & confirm with hash key.
- Turn cylinder clockwise and open door.

### Open with transponder

- Place the transponder with the flat side up on the numeric keypad.
- The front door unlocks and opens.

