


# Operating instructions washing machine



www.musikviertel-heipzig.de

## 1. Control panel

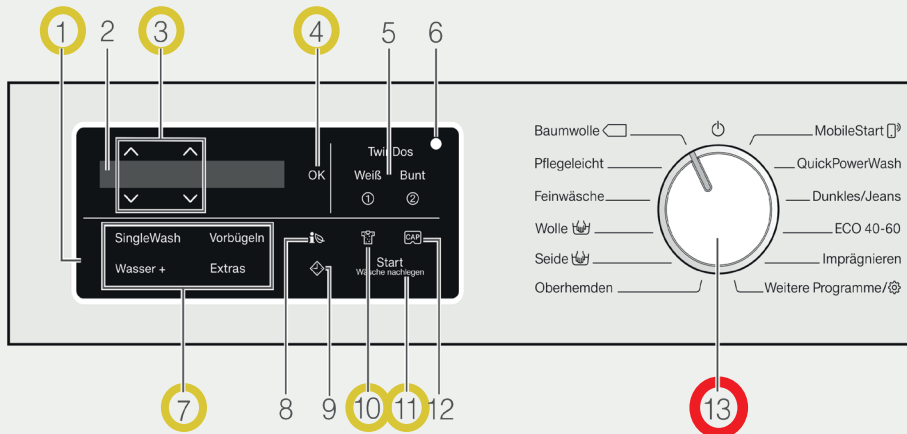

### Legende


- 1 Control field
- 3 Sensors show values in display
- 4 OK sensor control
- 7 Extra options
- 10 Level of soiling
- 11 Start/Add laundry
- 13 Programme selector

### Using sensors

- Sensors respond to contact with fingertip
- Selection possible, when sensor is lit

## Switching Washing machine On and Off

**Switching on** by turning the programme selector 13 to a programme.

**Switching off** by turning the program selector 13 to the  position.

## WASHING

### 1. Programme selection

- Load washing machine & shut the door
- Turn the programme selector (13) to a programme

### 2. Temperature / spin speed selection


 


#### Temperature / spin speed

- Temperature and speed information appear on the display
- Adjust with sensor controls  $\nabla/\wedge$  (3): temperature displayed in left, speed displayed in center

#### Extra option selection

- Touch Extras sensor control, Appearance in the display: „No Extras $\nabla$ “
- Touch sensor controls  $\nabla/\wedge$  (3) until the extra option you want appears in the display
- Confirm with the OK (4) sensor control

#### Level of soiling

- Touch sensor control  (10) to specify the level of soiling
- Selection: Light ; Normal ; Heavy 


### 3. Do not add detergent

- The washing machine has an automatic dispensing system
- Detergent is already added

### 4. Starting the programme

- Touch the flashing ‚Start/Add laundry‘ (11) sensor control
- The door will lock and the programme will start
- After 10 minutes, the indicators dim
- Reactivate indicators: Touch ‚Start/Add laundry‘ (doesn't have any effect on a running programme)

### 5. End of programme

- The door remains locked during the anticrease phase.
- Turn the programme selector to the  position. The door will unlock