


Induction hob instructions

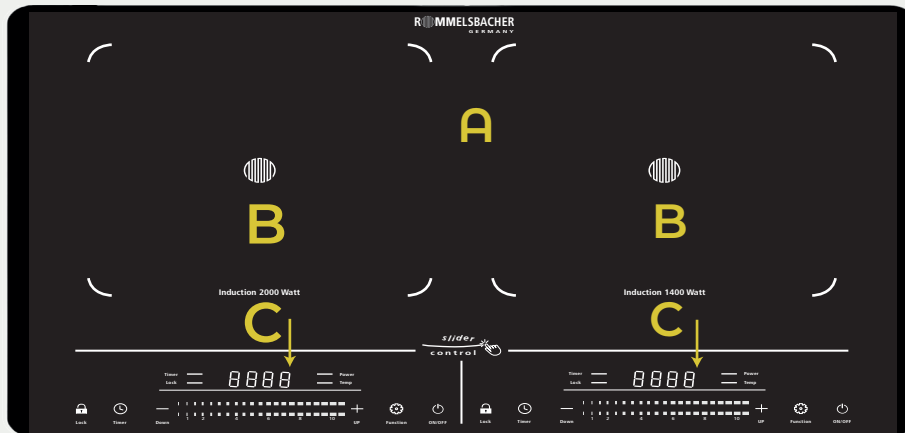

Legend


- A Glass ceramic tile
- B Cooking zones
- C Control panels Cooking zones

Touch Control Sensors

Operation is by touch control / tapping the sensor buttons.

- Lock, Timer, Function & OFF/ON
=> Device responds with a signal tone
- All other buttons are "mute".

Bedienfeld

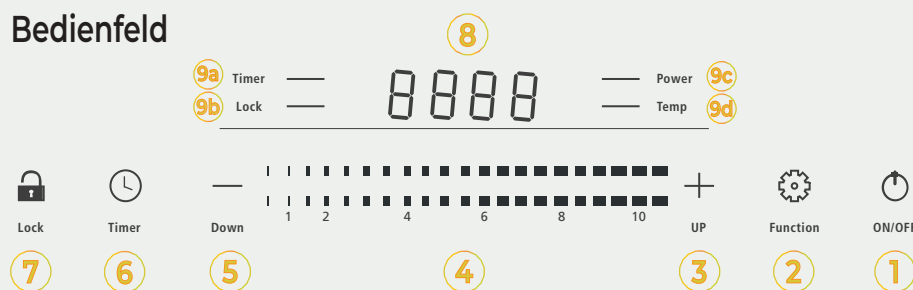

Notes (avoidance of malfunctions) !

- Always keep the control panel clean & dry
- Do not operate with wet fingers
- Do not use as a storage surface

Legend

- | | |
|---|---|
| 1 Main switch | 8 Display |
| 2 Mode selection and mode change | - Power level |
| - Power levels | - Temperature level |
| - Temperature levels | - Remaining cooking time set |
| 3 & 5 Parameter changes (increase / decrease) | - Residual heat present in the cooking zone (display H, if temp. > 80° C) |
| 4 Slider touch levels 1-10 | 9 LEDs for displaying the functions |
| 6 Running time setting | - Operation with runtime setting |
| 7 Key lock | - Key lock |
| | - Operation in power mode |
| | - Operation in temperature levels mode |

Operation / Functions

Induction hob

Switch on

- Place cookware on hob & tap ON/OFF button (1)
- Display 00 & signal tone
- Duration 60 seconds, then standby function

Select power/temperature levels

- Selecting power levels: Tap the "Function" button (2) once
- Selecting temperature levels: Tap the "Function" button (2) twice
- Change during operation: Tap the "Function" button (2) once

Switching off

- Tap the ON/OFF button (1) -> appliance switches to "Standby"
- Switch off permanently: Pull out the plug

Operating time limit

Automatic switch-off of the hob & standby

- after 2 hours
- if no setting changes are made within this period
- Timer setting > 2 hours overrides automatic switch-off

Slider touch operation (4)

Only for selecting / changing power and temperature levels

- Place your finger on the slider touch area
- Settings by moving back and forth

Alternatively

Direct setting by touching a marking

Please note

The following levels can be set with Slider Touch:

- Power levels 1, 2, 4, 6, 8, 10
- Temperature levels 60, 80, 100, 140, 180, 220° C

Intermediate levels can only be set by direct selection or via "+ / -"

Timer

- Press the timer button (6)
- With "+ / -" set duration
- Reset: Press and hold the timer button (6) for 3 seconds

Display lock

- Activate / deactivate: Press and hold the Lock button (7) for 3 seconds