

Air Conditioner Instructions & Notes

Prerequisites

Before you can switch on the air conditioning, please note the following points:

1. The temperature at the room thermostat must be at least 23° Celsius.
2. All windows must be closed.

Activating the air conditioning

To activate the air conditioning:

1. Set the button* next to the air conditioner to 'ON' to switch on the power supply.
2. You will hear a confirmation tone and the display will light up.
3. You can also conveniently activate the air conditioning system using the remote control or by pressing the touch display on the device.
4. You can set the temperature in the lower range to a minimum of 22 degrees Celsius.

Switching off manually

If you want to switch off the air conditioner, you have the following options:

- Switch off directly on the appliance
- Switch off via the remote control
- Press the button* ('OUT') again

* External switch next to the air conditioning unit or at the room entrance

Smart Home - automatic switch-off

- Please note that the air conditioning runs for a maximum of 3 hours at a time between 4:00 am and 6:00 pm. It then switches off automatically and can only be restarted using the button*.
- If you activate the air conditioning between 6.00 p.m. and 4.00 a.m., it will run for a maximum of 12 hours at a time. Even then, it must be restarted using the button*.
- The air conditioning also switches off automatically as soon as a window is opened.

In this way, we help to avoid potential energy wastage and offer this service despite high electricity costs.

Control panels



1. On/off switch
2. Up/down buttons
3. Cooling only
4. Heating only



Safety instructions

Please ensure that:

- Objects or obstacles do not obstruct the air flow from the internal and external ventilation grilles.
- You do not place any containers on the upper part of the appliance. Doing so may result in short circuits, damage to the air conditioner or even electric shocks.
- Do not lean or sit on the air conditioner to avoid serious damage.
- Never move the horizontal ventilation flap manually, but always use the remote control to change the settings.

If water leaks from the appliance, switch it off immediately and disconnect it from the power supply. In this case, contact your guest manager Christopher Karstein.

During heating operation, the air conditioner regularly removes ice from the external heat exchanger. The appliance will continue to run, but will temporarily stop emitting warm air into the room. This phase can last between 3 and a maximum of 10 minutes.