


Washing machine instructions

Control panel

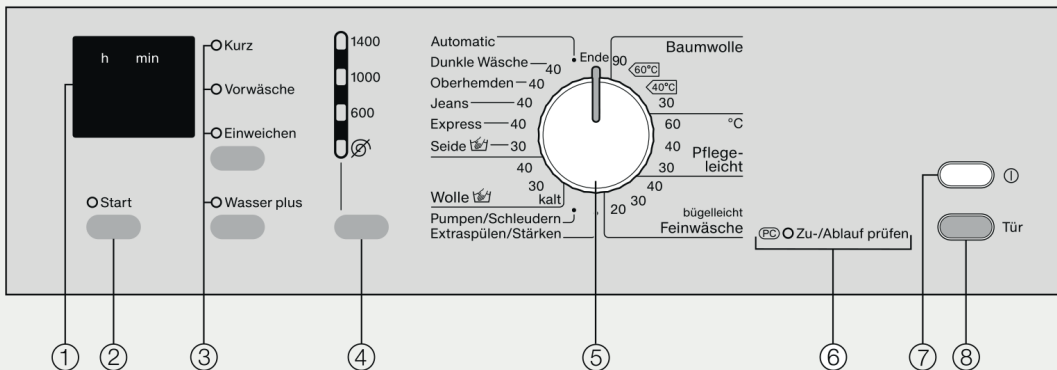

Legend

- 1 Display (remaining time)
- 2 Start Button
- 3 Extra Buttons
- 4 Spin button
- 5 Programme selector
- 6 Error/control light
- 7 On/off button
- 8 Door opening

WASHING

1. Preparation

- Switch on the machine (7), open the door (8)
- Load the washing machine and close the door

2. Programme settings

Programme/temperature selection

- Turn the programme selector (5) to the desired programme.
- The estimated duration appears in the display.

Extras

- Upper button – select by pressing: Soak, Pre-wash, Short, No selection
 - Short: Light soiling, washing time is shortened
 - Pre-wash: Heavy soiling
 - Soak: Heavy soiling, soaking time up to 2 hours
- Lower button - additional function Water plus: indicator light on = activated
 - Water quantity is increased

3. Add detergent

- Suitable detergent can be found in the laundry room

4. Start programme

- Press flashing button (2)

5. End of programme

- Remaining time display = 0
- Anti-crease function starts automatically
- Duration up to max. 30 minutes
- Machine switches off 15 minutes after end of anti-crease cycle

6. Remove laundry

- Press the door button (8)
- Remove laundry & ensure that no items/laundry remain
- Press the on/off button (7)
- Set the programme selector (5) to end